

## GENERAL INFORMATION

### Using The Wiring Diagrams

## INTRODUCTION

Saturn(R) obtains wiring diagrams and technical service bulletins, containing wiring diagram changes, from the domestic and import manufacturers. These are checked for accuracy and are all redrawn into a consistent format for easy use. All system wiring diagrams are available in color format and may be viewed and or printed in color or black and white, depending on your program settings and available printer hardware.

In the past, when cars were simpler, diagrams were simpler. All components were connected by wires, and diagrams seldom exceeded 4 pages in length. Today, some wiring diagrams require more than 16 pages. It would be impractical to expect a service technician to trace a wire from page 1 across every page to page 16.

Removing some of the wiring maze reduces eyestrain and time wasted searching across several pages. Today, the majority of Saturn(R) diagrams follow a much improved format, which permits space for internal switch details, and component and ground locations.

Components shown with a dashed line instead of a solid line indicate not all circuits are shown in this particular diagram (circuits shown in system diagrams are typically applicable to that system only). The remaining circuits connected to that component will be shown in the appropriate system that they apply to.

Today, the wiring diagram necessary to support a given repair procedure is included within that article or a link is provided to the appropriate SYSTEM WIRING DIAGRAM article. For example, the wiring diagram for a Ford EEC-IV system may be included in ENGINE PERFORMANCE and WIRING DIAGRAMS articles for Ford Motor Co. The wiring diagram for a cruise control system may be included in ACCESSORIES & EQUIPMENT section for the specific vehicle manufacturer, and the wiring diagram for an anti-lock brake system may be included in BRAKES and WIRING DIAGRAMS for the specific manufacturer.

WIRING DIAGRAMS contains all wiring diagrams not included in STARTING & CHARGING SYSTEMS and ACCESSORIES & EQUIPMENT. This includes: Data Link Connectors, Ground Distribution, Power Distribution, Engine Performance, Electric Cooling Fans, Anti-Lock Brakes, Electronic Suspension and Electronic Steering wiring diagrams. The Data Link Connectors wiring diagrams show the circuits by which the various on-board computers exchange information, and the diagnostic connectors used for diagnosis and their location. The Ground Distribution wiring diagrams show all vehicle ground points, their location, and the components common to those ground points. The Power Distribution wiring diagrams show the power feed circuits and the components common to those power feeds.

Wiring diagrams used to support the information in ACCESSORIES & EQUIPMENT are drawn in a "top-down" format. The diagrams are drawn with the power source at the top of the diagram and the ground point at the bottom of the diagram. Component locations are identified on the wiring diagrams. Any wires that do not connect directly to a component are identified on the diagram to indicate where they go.

## WIRING DIAGRAM COLOR ABBREVIATIONS


### COLOR ABBREVIATIONS

Color	Normal	Optional
Black	BLK	BK
Blue	BLU	BU
Brown	BRN	BN
Clear	CLR	CR
Dark Blue	DK BLU	DK BU
Dark Green	DK GRN	DK GN
Green	GRN	GN
Gray	GRY	GY
Light Blue	LT BLU	LT BU
Light Green	LT GRN	LT GN
Orange	ORG	OG

<b>Color</b>	<b>Normal</b>	<b>Optional</b>
Pink	PNK	PK
Purple	PPL	PL
Red	RED	RD
Tan	TAN	TN
Violet	VIO	VI
White	WHT	WT
Yellow	YEL	YL

## **WIRING DIAGRAM SYMBOLS**

**NOTE:** Standard wiring symbols are used on all wiring diagrams. The list below will help clarify any symbols that are not easily understood at a glance. Most components are labeled "Motor", "Switch" or "Relay" in addition to being drawn with the standard symbol.

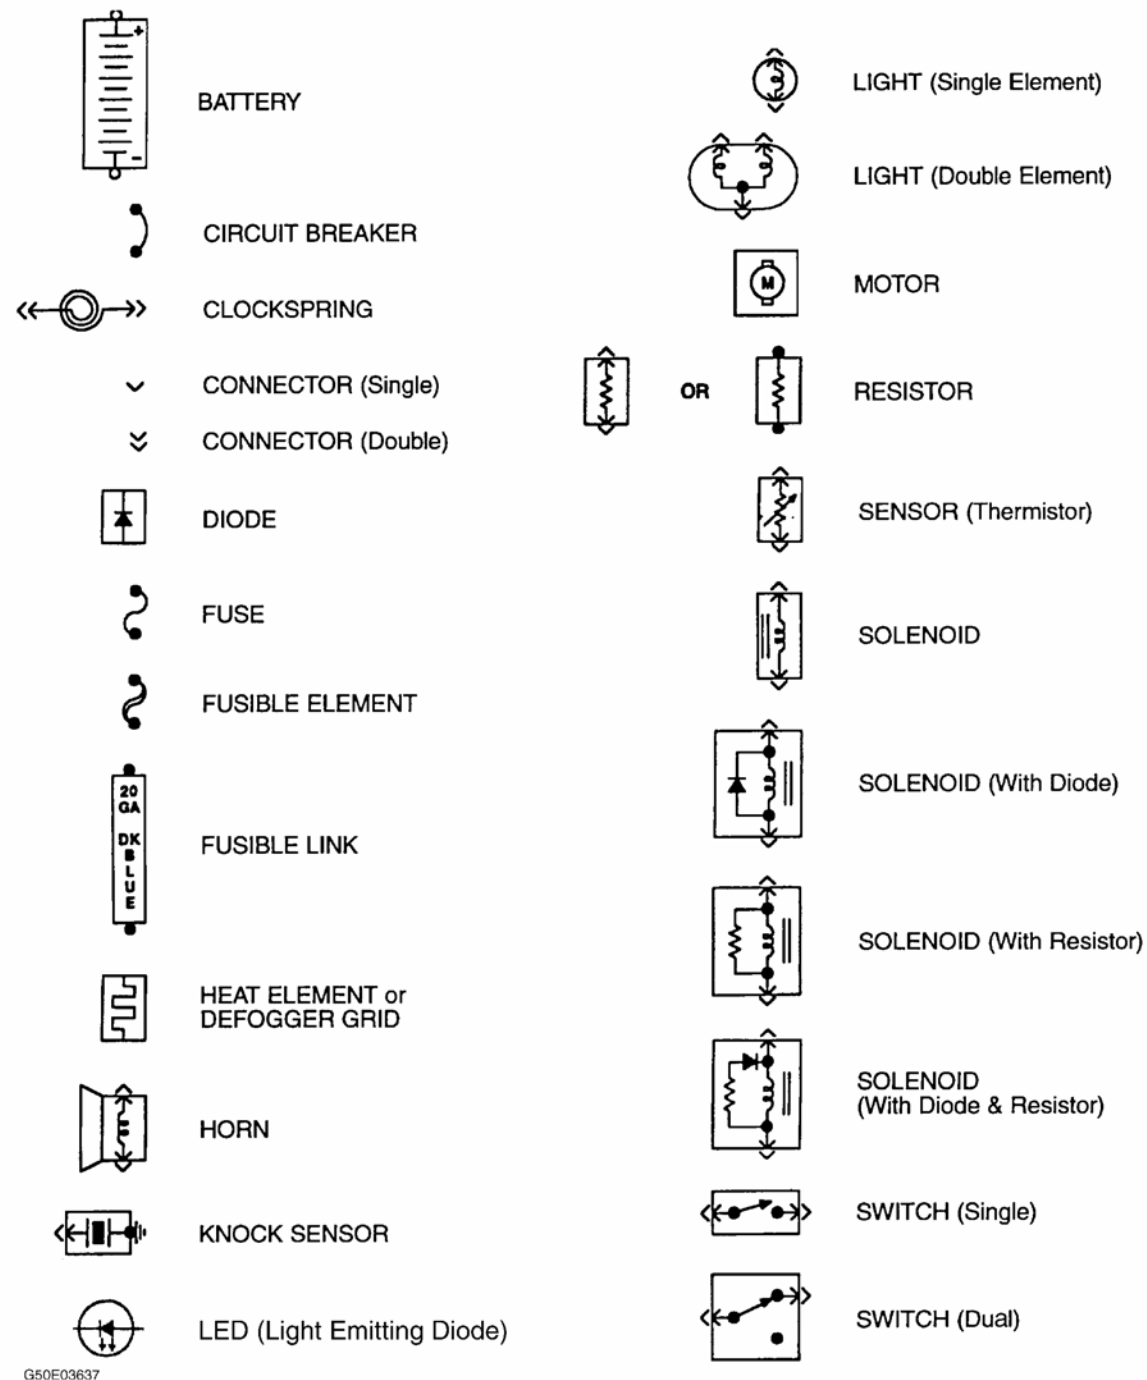


G50E03637

**Fig. 1: Identifying Standard Wiring Diagram Symbols**

## WIRING DIAGRAM GROUND NUMBER LOCATIONS

**NOTE:** The following illustration depicts standardized ground numbers and locations to be used in conjunction with Saturn(R) wiring diagrams applying to 2001 and prior model years only. See [Fig. 2](#). Wiring diagrams applying to newer model years depict manufacturer-specified ground numbers and locations. Do not utilize the illustration with 2002 and newer model year wiring

diagrams.

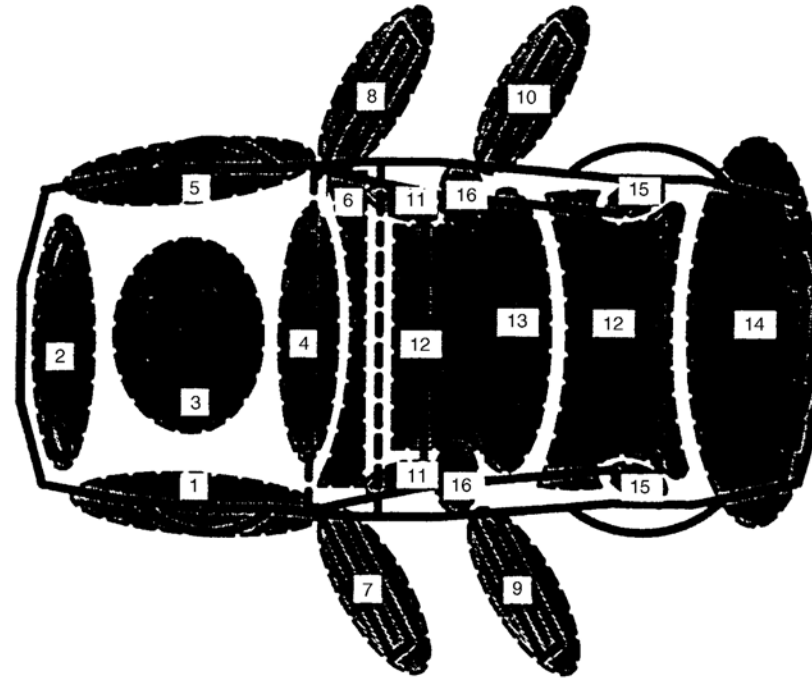

- |   |   |  |
|---|---|--|
| <p><b>1) Left Fender</b><br/>           G100 ..... Front Of Fender<br/>           G102 ..... On Shock Tower<br/>           G104 ..... Rear Of Fender</p> <p><b>2) Front of Vehicle</b><br/>           G106 ..... Behind Left Headlight<br/>           G107 ..... Behind Right Headlight<br/>           G108 ..... Left Radiator Support<br/>           G109 ..... Right Radiator Support</p> <p><b>3) Engine</b><br/>           G110 ..... Left Front Of Engine<br/>           G111 ..... Left Front Behind Battery<br/>           G112 ..... Left Side Of Engine<br/>           G114 ..... Left Rear Of Engine<br/>           G115 ..... Rear Of Engine<br/>           G117 ..... Right Rear Of Engine<br/>           G119 ..... Right Front Of Engine<br/>           G120 ..... Right Side Of Engine<br/>           G125 ..... Front Of Engine<br/>           G127 ..... Left Underside Of Hood<br/>           G128 ..... Right Underside Of Hood<br/>           G129 ..... Top Center Of Transaxle</p> <p><b>4) Safety Wall</b><br/>           G116 ..... Left Side Of Safety Wall<br/>           G121 ..... Center Of Safety Wall<br/>           G123 ..... Right Side Of Safety Wall</p> <p><b>5) Right Fender</b><br/>           G101 ..... Front Of Fender<br/>           G103 ..... On Shock Tower<br/>           G105 ..... Rear Of Fender</p> | <p><b>6) Instrument Panel</b><br/>           G200 ..... Left Kick Panel<br/>           G201 ..... Right Side Of I/P<br/>           G202 ..... Left Side Of I/P<br/>           G203 ..... Right Kick Panel<br/>           G204 ..... Left Rear Of Steering Support<br/>           G205 ..... Right Rear Of Steering Support<br/>           G206 ..... Center Of I/P<br/>           G207 ..... Top Of Steering Column</p> <p><b>7) Left Front Door</b><br/>           G500 ..... Left Front Door</p> <p><b>8) Right Front Door</b><br/>           G600 ..... Right Front Door</p> <p><b>9) Left Rear Door</b><br/>           G700 ..... Left Rear Door</p> <p><b>10) Right Rear Door</b><br/>           G800 ..... Right Rear Door</p> <p><b>11) "A" Pillars</b><br/>           G900 ..... Left "A" Pillar<br/>           G901 ..... Right "A" Pillar</p> <p><b>12) Passenger Compartment</b><br/>           G300 ..... Below Left Front Seat<br/>           G301 ..... Below Right Front Seat<br/>           G302 ..... Below Center Console<br/>           G303 ..... Below Right Rear Seat<br/>           G304 ..... Below Left Rear Seat<br/>           G306 ..... Below Center Of Rear Seat<br/>           G307 ..... Below Right Rear Window<br/>           G309 ..... Left Front Door Sill<br/>           G310 ..... Behind Right Rear Seat<br/>           G311 ..... Center Of Rear Shelf<br/>           G312 ..... Behind Left Rear Seat</p> | <p><b>13) Roof</b><br/>           G902 ..... Left Front Of Roof<br/>           G903 ..... Right Front Of Roof<br/>           G906 ..... Left Rear Of Roof<br/>           G907 ..... Right Rear Of Roof<br/>           G908 ..... Center Front Of Roof<br/>           G909 ..... Center Rear Of Roof</p> <p><b>14) Rear Of Vehicle</b><br/>           G400 ..... Left Front Side Of Trunk<br/>           G401 ..... Right Front Side Of Trunk<br/>           G402 ..... Left Rear Wheelwell<br/>           G403 ..... Right Rear Wheelwell<br/>           G404 ..... Left Rear Side Of Trunk<br/>           G405 ..... Right Rear Side Of Trunk<br/>           G406 ..... Center Rear Of Trunk Lid<br/>           G407 ..... Center Rear Of Trunk<br/>           G408 ..... Center Front Of Trunk<br/>           G409 ..... Rear Of Cargo Bed</p> <p><b>15) "C" Pillars</b><br/>           G904 ..... Left "C" Pillar<br/>           G905 ..... Right "C" Pillar</p> <p><b>16) "B" Pillars</b><br/>           G305 ..... Right "B" Pillar<br/>           G308 ..... Left "B" Pillar</p> |
|---|---|--|

G00027307

**Fig. 2: Ground Numbers & Locations (2001 & Prior Model Years)**

## **WIRING DIAGRAM COMPONENT LOCATIONS**

When trying to locate a component in a wiring diagram and you don't know the specific system where it is located, use this handy component locator to find the system wiring diagram in which the component is located. Then, go to that system and locate the component within the wiring diagram.

For example, if you don't know the specific system in which the ignition switch is located, look up ignition switch in the wiring diagram component location tables and go to the appropriate wiring diagram(s) which contain either full or partial views of the ignition switch. The full view of the ignition switch is located in Power Distribution.

The first listing for the component will be the full or most complete view of the component. Additional listings will be partial views of the component. Not all components are used on all models.

All components will have a partial view in Ground Distribution and Power Distribution. Data Link Connectors show connecting circuits between modules. Alternate names for components may be listed in wiring diagram component locations tables.

## WIRING DIAGRAM COMPONENT LOCATIONS

<b>Component</b>	<b>Wiring Diagram</b>
ABS Electronic Control Unit	Anti-Lock Brakes; Data Link Connectors
ABS Hydraulic Unit	Anti-Lock Brakes
Acceleration Sensor	Anti-Lock Brakes
Accessory Delay Relay	Power Windows
A/C Compressor Clutch Relay	Engine Performance
A/C Sensor	Engine Performance
A/C Pressure Switch	Engine Performance
Adaptive Lamp Control Module	Exterior Lights
Air Bag(s)	Air Bag Restraint System
Air Bag Module	Air Bag Restraint System
Air Bag Sensor(s)	Air Bag Restraint System
Air Injection Pump Relay	Engine Performance
Air Temperature Sensor	Overhead Console
Alternator (Generator)	Generators & Regulators
Anti-Theft Control Module	Anti-Theft System; Starters
Autolamp Control Relay	Headlight Systems; Daytime Running Lights
Automatic Shutdown (ASD) Relay	Engine Performance; Generators & Regulators
Autostick Switch	Engine Performance
Auxiliary Battery Relay	Generators & Regulators
Back-Up Lights	Back-Up Lights; Exterior Lights
Barometric (BARO) Pressure Sensor	Engine Performance
Battery	Power Distribution
Battery Temperature Sensor	Engine Performance
Body Control Module	Body Control Computer; Anti-Theft System; Daytime Running Lights; Engine Performance; Headlight Systems; Warning Systems
Boost Control Solenoid	Engine Performance
Boost Sensor	Engine Performance
Brake Fluid Level Switch	Analog Instrument Panels
Brake On/Off (BOO) Switch	Cruise Control Systems; Engine Performance; Shift Interlock Systems
Buzzer Module	Warning Systems
Camshaft Position (CMP) Sensor	Engine Performance
Central Control Module	Anti-Theft System
Clockspring	Air Bag Restraint System; Cruise Control Systems; Steering Column Switches

<b>Component</b>	<b>Wiring Diagram</b>
Clutch Pedal Position Switch	Starters
Clutch Start Switch	Starters
Combination Meter	Analog Instrument Panels
Constant Control Relay Module (CCRM)	Engine Performance; Electric Cooling Fans
Convenience Center	Power Distribution; Illumination/Interior Lights
Convertible Top Motor	Power Convertible Top
Convertible Top Switch	Power Convertible Top
Crankshaft Position (CKP) Sensor	Engine Performance
Cruise Control Module	Cruise Control Systems
Cruise Control Switch	Cruise Control Systems
Condenser Fan Relay(s)	Electric Cooling Fans
Data Link Connector (DLC)	Engine Performance
Daytime Running Lights Module	Daytime Running Lights; Exterior Lights
Defogger Relay	Rear Window Defogger
Diagnostic Energy Reserve Module (DERM)	Air Bag Restraint System
Discriminating Sensor (Air Bag)	Air Bag Restraint System
Distributor	Engine Performance
Door Lock Actuators	Power Door Locks; Remote Keyless Entry
Door Lock Relay(s)	Power Door Locks
Electrochromic Mirror	Power Mirrors
Electronic Level Control (ELC) Height Sensor	Electronic Suspension
Electronic Level Control (ELC) Module	Electronic Suspension
Engine Coolant Temperature (ECT) Sending Unit	Analog Instrument Panels
Engine Coolant Temperature (ECT) Sensor	Engine Performance
Engine Control Module	Engine Performance; Generators & Regulators; Starters
ETACS ECU	Warning Systems; Power Windows; Remote Keyless Entry
Evaporative (EVAP) Emissions Canister	Engine Performance
EVAP Canister Purge Solenoid	Engine Performance
EVAP Canister Vent Solenoid	Engine Performance
Exhaust Gas Recirculation (EGR) Valve	Engine Performance
Fuel Tank Vacuum Sensor	Engine Performance
Fog Lights	Headlight Systems; Daytime Running Lights
Fog Light Relay	Headlight Systems; Daytime Running Lights
Fuel Door Release Solenoid	Power Fuel Door Release
Fuel Gauge Sending Unit	Analog Instrument Panels
Fuel Injectors	Engine Performance
Fuel Pump	Engine Performance
Fuel Pump Relay	Engine Performance; Power Distribution
Fuse/Relay Block	Power Distribution
Fusible Links	Power Distribution; Generators & Regulators; Starters
Generator	Generators & Regulators; Engine Performance; Power Distribution
Generic Electronic Module (GEM)	Body Control Modules; Electronic Suspension

<b>Component</b>	<b>Wiring Diagram</b>
Glow Plug Relay	Engine Performance
Glow Plugs	Engine Performance
Grounds	Ground Distribution
Headlight Door Module	Headlight Doors
Headlight Relay	Headlight Systems; Daytime Running Lights
Headlights	Headlight Systems; Daytime Running Lights
Heated Oxygen Sensor(s) (HO2S)	Engine Performance
Heated Windshield Control Module	Heated Windshields
Height Sensor	Electronic Suspension
Horns	Steering Column Switches
Horn Relay	Steering Column Switches
Idle Air Control (IAC) Motor/Valve	Engine Performance
Ignition Coil(s)	Engine Performance
Ignition Key Lock Cylinder	Anti-Theft System
Ignition Module	Engine Performance
Ignition Switch	Power Distribution; Engine Performance; Generators & Regulators; Starters
Illuminated Entry Module	Illumination/Interior Lights
Illumination Lights	Illumination/Interior Lights
Impact Sensor	Air Bag Restraint System
Inertia Fuel Shutoff Switch	Engine Performance
Inhibit Relay	Starters
Instrument Cluster	Analog Instrument Panels
Intake Air Temperature (IAT) Sensor	Engine Performance
Interior Lights	Illumination/Interior Lights
Interlock Switch	Starters
Junction Block	Power Distribution
Keyless Entry Receiver	Remote Keyless Entry
Key Reminder Switch	Starters
Knock Sensor	Engine Performance
Lamp Control Module	Exterior Lights
License Plate Lamp	Exterior Lights
Lighting Control Module	Lighting Control Modules; Anti-Theft System; Daytime Running Lights; Headlight Systems
Lower Relay	Power Convertible Top
Malfunction Indicator Light (MIL)	Engine Performance; Instrument Panels
Manifold Absolute Pressure (MAP) Sensor	Engine Performance
Mass Airflow (MAF) Sensor	Engine Performance
Mega Fuse	Generators & Regulators
Memory Seat/Mirror Module	Memory Systems
Mirror Defogger	Rear Window Defogger
Moon Roof Motor	Power Moon Roof
Moon Roof Relay	Power Moon Roof

<b>Component</b>	<b>Wiring Diagram</b>
Multi-Function Control Module	Warning Systems
Neutral Safety Switch	Starters
Oil Level Switch	Engine Performance
Oil Pressure Switch/Sending Unit	Analog Instrument Panels; Engine Performance
Overhead Console	Overhead Console
Oxygen Sensor(s) (O2S)	Engine Performance
Parking Brake Switch	Analog Instrument Panels
Park Lights	Exterior Lights
Park/Neutral Position Switch	Starters; Engine Performance; Anti-Theft System; Body Control Module
Perimeter Lighting Control Relay	Exterior Lights
Power Amplifier	Power Antennas
Power Antenna Module	Power Antennas
Power Antenna Motor	Power Antennas
Power Distribution Center	Power Distribution; Generators & Regulators; Starters
Power Door Lock Motors	Power Door Locks
Power Mirror Motors	Power Mirrors; Memory Systems
Power Sliding Door Controller	Power Sliding Side Door
Power Seat Motors	Power Seats; Memory Systems
Power Steering Pressure Switch	Engine Performance
Power Top Motor	Power Convertible Top
Power Top Relay(s)	Power Convertible Top
Powertrain Control Module	Engine Performance; Analog Instrument Panels; Cruise Control Systems; Data Link Connectors; Generators & Regulators; Starters
Power Window Motors	Power Windows
Power Window Relay(s)	Power Windows
Radiator Fan Motor(s)	Electric Cooling Fans
Radiator Fan Relay(s)	Engine Performance; Electric Cooling Fans;
Rainsense Module	Wiper/Washer Systems
Raise Relay	Power Convertible Top
Remote Anti-Theft Personality (RAP) Module	Anti-Theft System; Starters; Warning Systems
Seat Belt Pretensioners	Air Bag Restraint System
Seat Belt Retractor Solenoid	Passive Restraints
Seat Belt Switch	Air Bag Restraint System; Passive Restraints
Shift Interlock Solenoid	Shift Interlock Systems
Shift Lock Actuator	Shift Interlock Systems
Side Marker Lights	Exterior Lights
SIR Coil Assembly (Clockspring)	Air Bag Restraint System
Slip Ring (Clockspring)	Air Bag Restraint System; Steering Column Switches
SRS Control Module	Air Bag Restraint System
Starter Motor	Starters
Starter Interrupt Relay	Starters
Starter Solenoid	Starters



<b>Component</b>	<b>Wiring Diagram</b>
Starter Relay	Starters
Steering Wheel Position Sensor	Anti-Lock Brakes
Stoplights	Exterior Lights
Stoplight Switch	Engine Performance; Cruise Control Systems; Anti-Lock Brakes
Sun Roof ECU	Power Sun Roof
Sun Roof Motor	Power Sun Roof
Sun Roof Position Sensor	Power Sun Roof
Taillights	Exterior Lights
Throttle Position (TP) Sensor	Engine Performance
Torque Converter Clutch Solenoid/Switch	Engine Performance
Traction Control Switch	Anti-Lock Brakes
Trailer Tow Connector	Exterior Lights
Trailer Tow Relay	Exterior Lights
Transmission/Transaxle	Engine Performance
Transmission Control Module (TCM)	Engine Performance; Starters
Transmission Range Sensor	Starters; Back-Up Lights; Engine Performance
Transmission Range Switch	Back-Up Lights; Engine Performance; Anti-Theft System
Turn Signal Flasher	Exterior Lights
Turn Signal Lights	Exterior Lights
Twilight Sentinel Switch	Headlight Systems; Daytime Running Lights
Vapor Canister Leak Detection Pump	Engine Performance
Vehicle Control Module (VCM)	Engine Performance
Vehicle Dynamic Module	Electronic Suspension
Vehicle Speed Control Servo	Cruise Control Systems
Vehicle Speed Sensor	Data Link Connectors; Analog Instrument Panels; Cruise Control Systems; Electronic Suspension
Voltage Regulator	Generators & Regulators
Water-In-Fuel Sensor	Engine Performance; Analog Instrument Panels
Wheel Speed Sensors	Anti-Lock Brakes
Window Timer Module	Power Convertible Top
Windshield Intermittent Wiper Relay	Wiper/Washer Systems
Windshield Washer Motor	Wiper/Washer Systems
Wiper Motor	Wiper/Washer Systems